


DEDICATED VS. SHARED EMERGENCY EXIT WIRE

WIRING DIAGRAM

Install Back Door Buzzer Diodes
as shown in Bus wiring diagrams
for diode sniffer to detect.

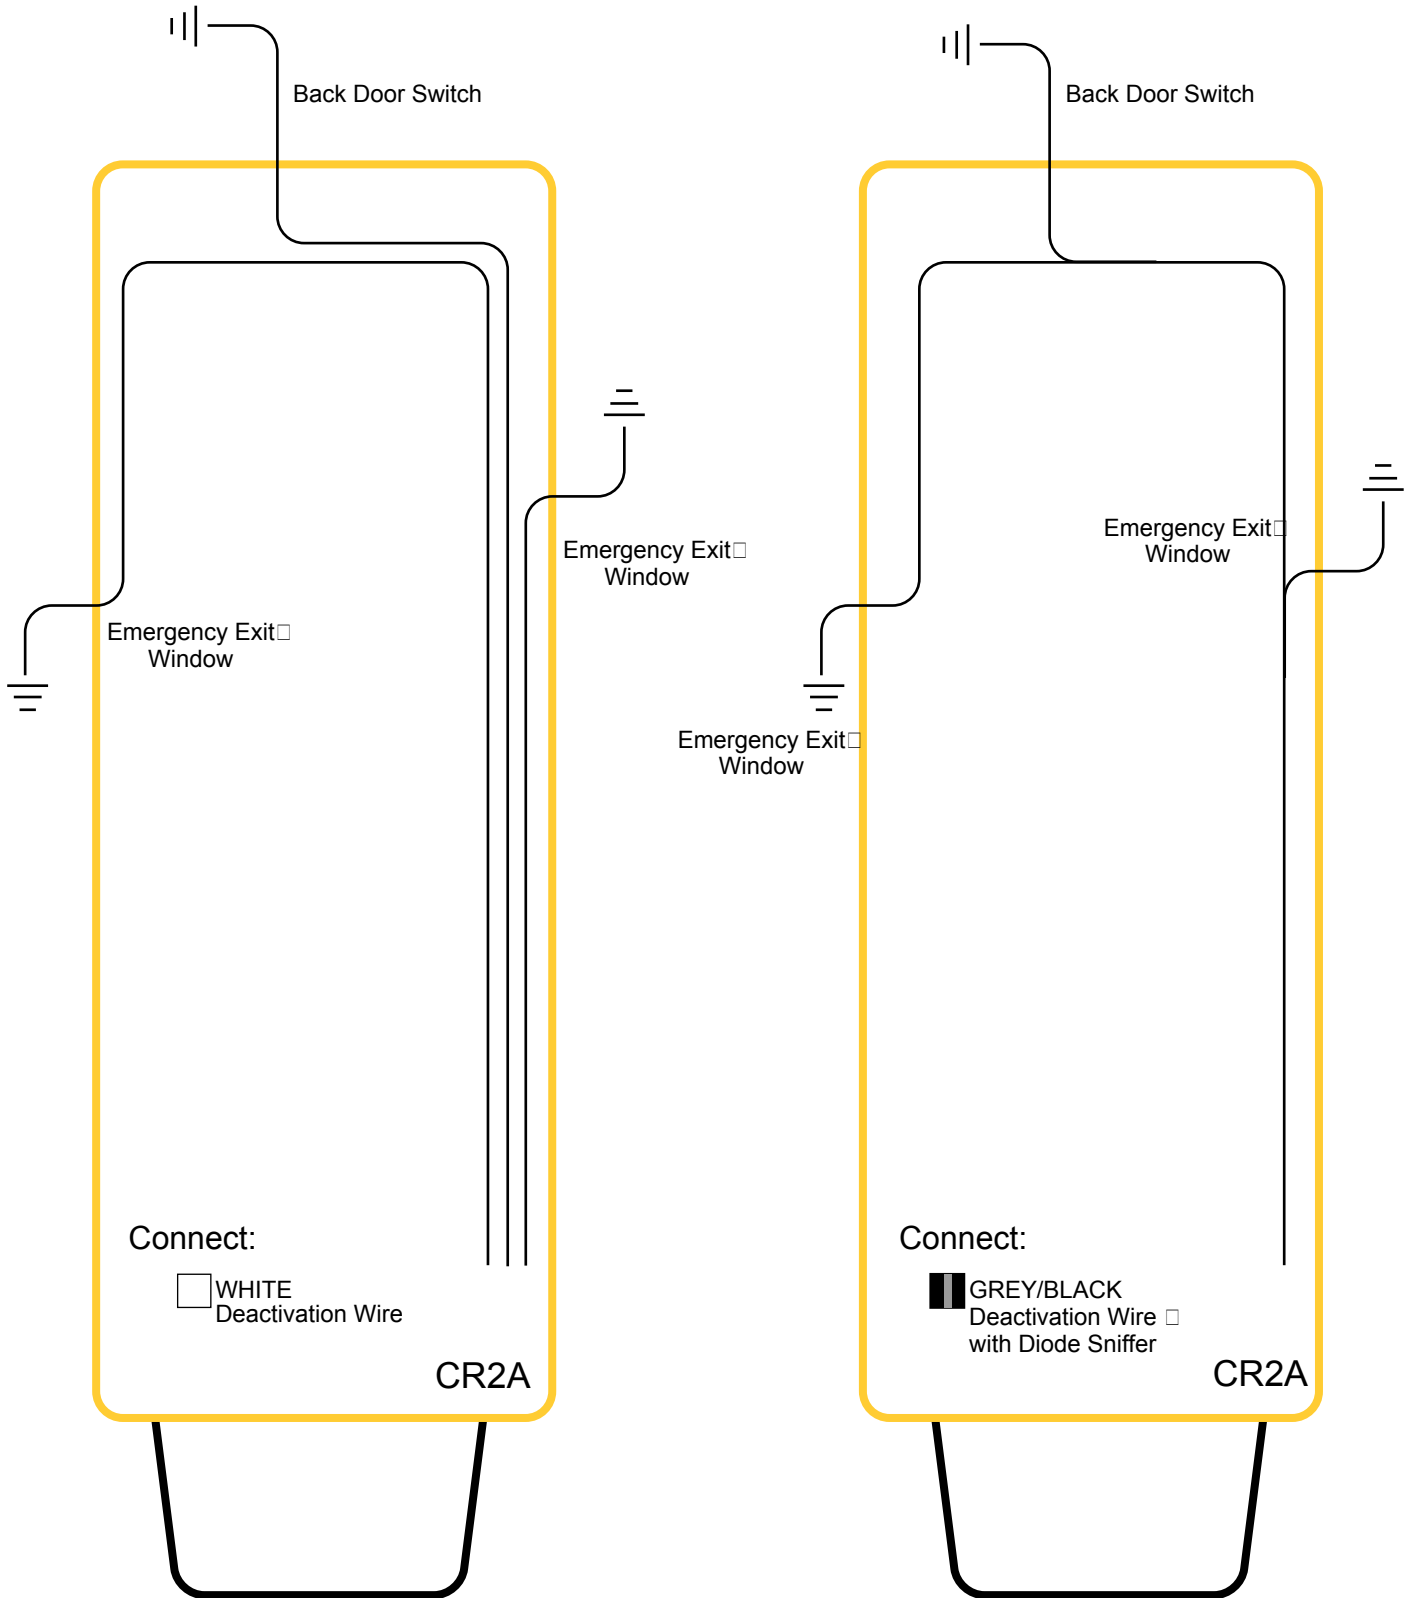

Connect:

WHITE
Deactivation Wire

CR2A

DEDICATED

Connect:

GREY/BLACK
Deactivation Wire
with Diode Sniffer

CR2A

SHARED